

## ICON - WPANIC - Radio Panic Button

## Introduction


The WPANIC is a simple to use emergency button, which is battery operated and communicates with your Icon-RX Receiver via a fixed code radio transmission (RF). Pressing the button firmly causes the LED light to come on & the button to transmit to your receiver.



## Setup

- 1. Remove the rear cover by removing the three case screws.
- 2. Select a transmission code for your emergency button by moving any of the dipswitches numbered 2 8 into a random combination of up, down or middle for each switch.

  Note: Do not move dipswitch Number 1 from the default position (middle).
- 3. If you are utilising more than one emergency button with your Icon-Rx receiver, you can either code your emergency buttons the same so that they activate the same channel on your receiver, or you can code them differently to activate different channels.
- 4. Refer to your RXPRO Manual for learning procedure (same as PIRW).

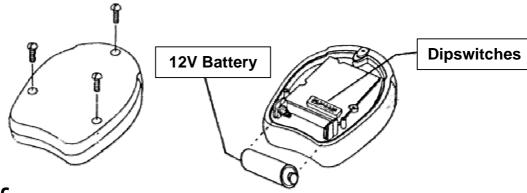

## Specifications

Power Supply: 12VDC Alkaline Battery Type 23A

Standby Current: 10µA Operation Current: 5mA